





KITCHEN MINDER™




1 Product Status: Cook

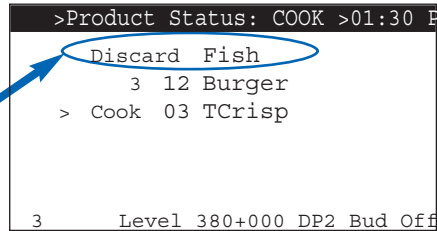

Each line represents an action required for one pan of product. In this case, discard pan of **Fish**

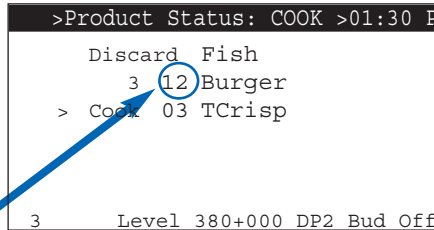

This number, **12**, is the total number of patties/pieces that need to be cooked and placed in a PHU pan. In this case, cook **12**

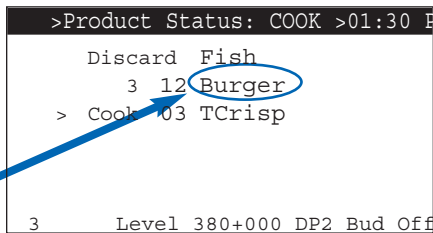


This is the name of the product on which action should be taken. In this case, **Burger patties** need to be cooked

2 Product Status: Cook

Check Mark

Products need to be marked when they are in the process of being cooked

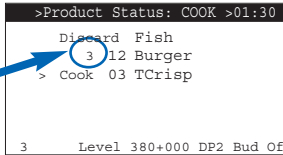


In this case, mark **12 Burger**

To Mark a Product: Press the UP or DOWN Arrow Key to move the cursor to the appropriate product



Press the left function key to mark product

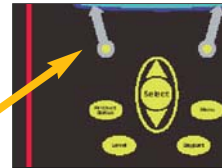

3 When Product Has Cooked


Place the PHU pan with the **cooked product** in the appropriate PHU cavity



Press the appropriate PHU Timer Bar button




After pressing the button, the product that was cooked, in this case **12 Burger patties** deletes from the Product Status Screen

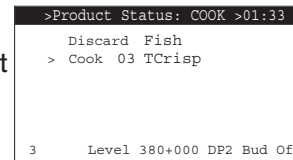

4 Product Status: Full

All needed pans are full of product

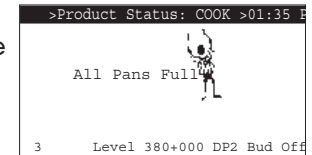

No additional product needs to be cooked at this time

5 Quality Grade Display

The quality grade displayed in the kitchen reflects Team Member performance for the last 30 minutes



This measures how well Team Members follow the KITCHEN MINDER™ and PHU Timer Bar lights

- To improve your grade throughout the day:
- Follow KITCHEN MINDER™ Action Requirements
 - Press appropriate PHU Timer Bar lights